



FOR BARBECUES & WOOD STOVES

For the safe and easy lighting of barbecues and wood stoves without giving off smoke or odours. Perfect for use in the home, when camping, or hiking.

Place 2-3 firestarters in or around the logs, coals, charcoals etc. and light the sealed firestarters. Firestarters will burn even if wet.

The foil is used as a wick, and lit in the corner.

Before placing food on the grill, the firestarter must be fully burned, and the charcoals must be covered with a layer of ash.

Barbecue-firestarters by EN 1860-3. Unlimited durability.

Keep out of the reach of children.

Contains N-Paraffin DIN EN 1860-3:2003(D)





Distributed by GEPRO AUSTRALIA PTY LTD PO BOX 1565 BIBRA LAKE DC WA 6965 Ph 1800 350 001 www.gepro.com.au



www.quickfire.dk

Made in China Product: QF25

